




Where Kids of All Abilities Learn Through Play!

INFLATION VALVE FOR AIR-LITE BALL PIT ITEM SP4610

The Air-Lite Ball Pit comes with a unique two part valve. To prevent air leakage, make sure you have the two rings in place and the caps are screwed on tight.



1 Valve is closed. Notice that both rings/washers must be in place.

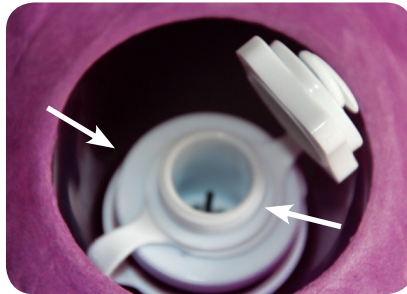

2 To inflate, unscrew the top but keep the bottom inside valve securely closed. Air will not leak during inflation since this is a one-way valve. After inflating, make sure both caps are tightly closed and both rings/washers are in place. Inflation takes about three minutes with a high volume inflator.



3 To deflate, unscrew the entire valve.

