


BACKBOARD EXTENSIONS	EXTENSION
GOAL HEIGHT	2'-8" (.81 M)
10'-0" (3.05 M)	2'-4" (.71 M)
9'-0" (2.74 M)	1'-11" (.58 M)
8'-0" (2.44 M)	1'-5" (.43 M)
6'-6" (1.98 M)	

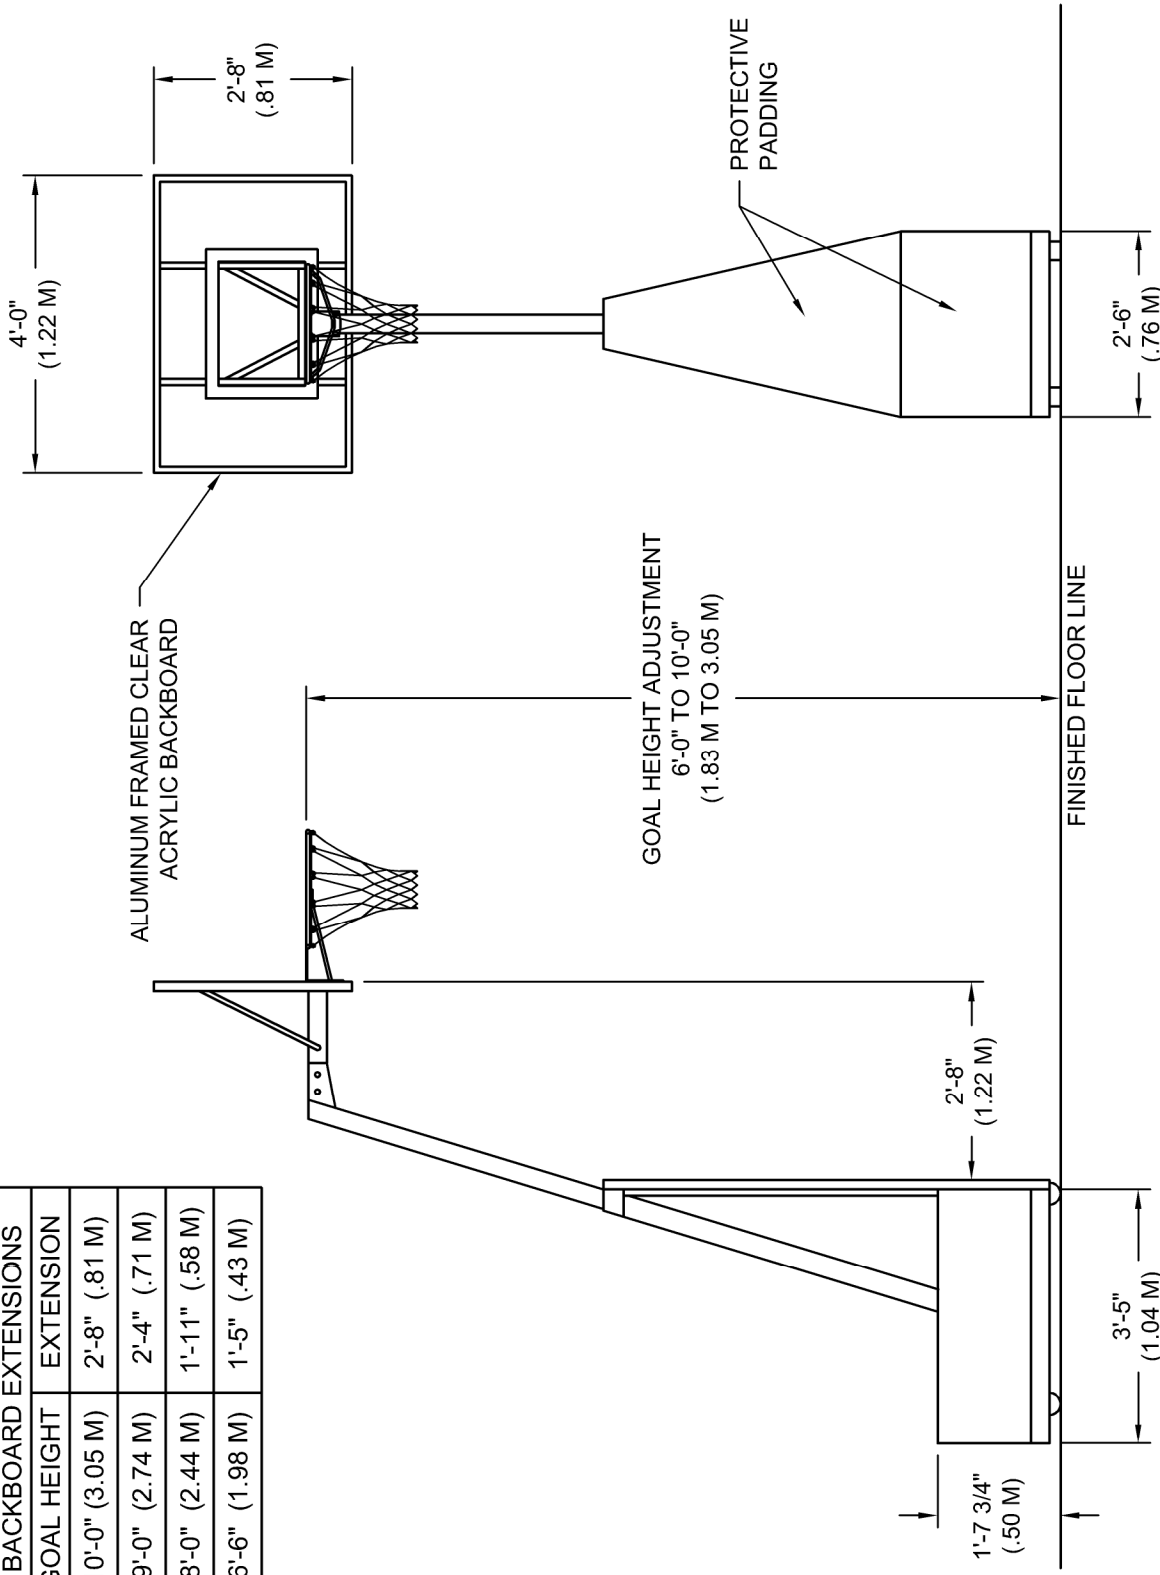

STORAGE DIMENSIONS	
MODEL	5014
WIDTH	4'-0" (1.22 M)
LENGTH	5'-2" (1.57 M)
HEIGHT	6'-8 1/2" (2.02 M)

DIMENSIONS IN FEET / INCHES & (METERS)

REVISION		
REV.	DATE	BY
A	12/17/03	MJB
B	01/19/06	JJC
C	04/24/08	RWP
D	02/09/11	WDC




Gared Holdings, LLC
 9200 E. 146th St. Noblesville, IN 46060

THIS DOCUMENT CONTAINS TRADE SECRET AND OTHER MATERIALS WHICH ARE PROTECTED BY CONFIDENTIALITY NOTICE AND AGREEMENT AND BY COPYRIGHT. ANY USE OR COPYING OF THIS DOCUMENT EXCEPT AS AUTHORIZED BY GARED HOLDINGS, LLC IS STRICTLY PROHIBITED.

MINI ROLL AROUND FLOOR UNIT

DRAWN	CONNERLEY	DATE	04/23/03	MATERIAL	N/A
APPROVED	JJC	DATE	04/23/03	FINISH	N/A
FILE LOC.	Q:\Final Release\Specifications			DWG. NO.	5014
SIZE	SCALE	SHT. NO.	PART NO.	REV	
A	NONE	1 OF 1		MINI-EZ	
				D	



MINI E-Z

MINI-ROLL AROUND PORTABLE BASKETBALL GOAL

FRAME

The base is fabricated from 14-gauge sheet steel and coated with a durable white powder coat finish. The support post is heavy-wall square tubing with a zinc-plated inner post that is spring loaded for easy adjustment. Unit adjusts from 6'-6" to 10' and has a boom extension of 2'-8".

BALLAST

Empty weight of goal support is 288 lbs. Gross weight of the unit, including the minimum 250 lbs. of ballast, is 538 lbs. The preferred ballast material is dry sand and is not included with the unit.

WHEELS

Each unit has large diameter wheels on the rear and swivel castors on the front. All wheels have a polyurethane surface.

PADDING

The front of each unit is padded with 1" polyurethane foam covered by 14-ounce vinyl.

BACKBOARD AND GOAL

Unit comes with 32" x 48" clear acrylic backboard and standard goal.

Subject to design change and current manufacturing practices.
Revised Feb. 8, 2011 ©2008 Gared Holdings, LLC